
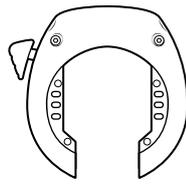


The GSD Frame Lock, by ABUS®

What's included


- ABUS® Frame Lock x 1
- ABUS® Chain 130 cm x 1
- Keys x 2
- M5 x 12 Screw x 2
- M5 Washer x 2

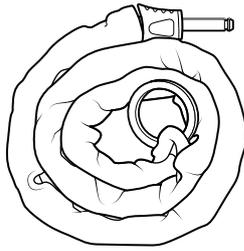


Installation

Tools required (not included)


- 4 mm Allen Wrench

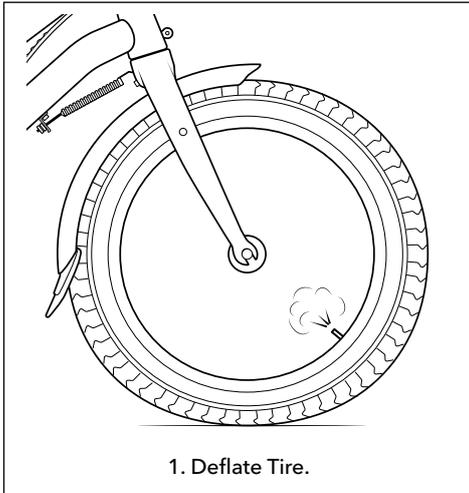

1. Deflate Tire.

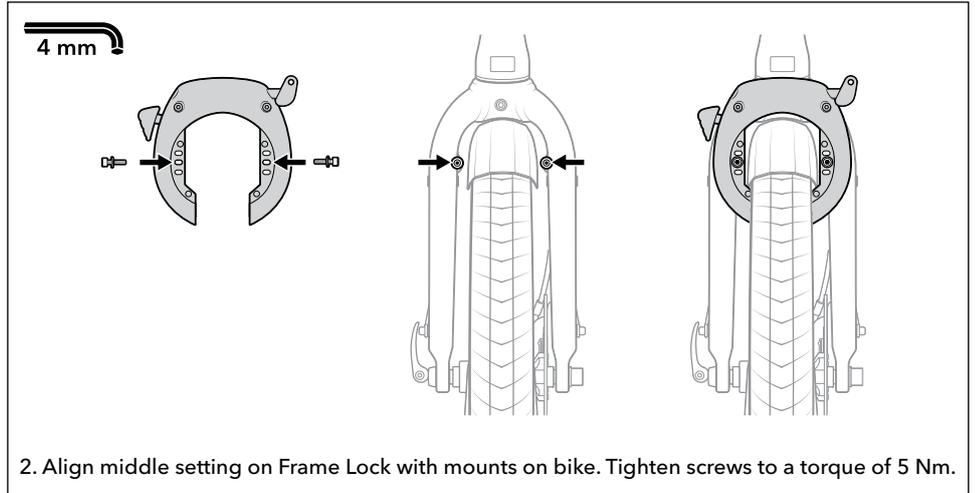

2. Align middle setting on Frame Lock with mounts on bike. Tighten screws to a torque of 5 Nm.

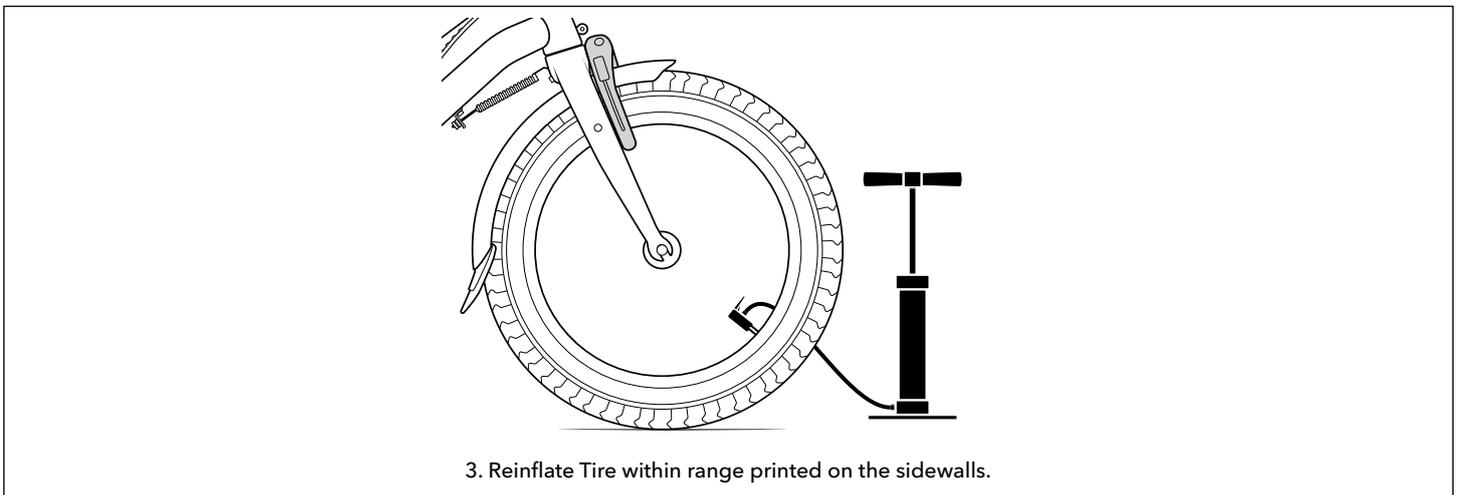

3. Reinflate Tire within range printed on the sidewalls.

⚠ If you are unsure of how to install this product, please consult a qualified bicycle technician.

Usage

Frame Lock

1. Close lock by turning key and pulling lever downwards at the same time.
2. Open lock by turning the key.

Chain

1. To use the chain, always run Chain through frame, wrap Chain around a fixed object and slide Chain End through metal ring before connecting to Frame Lock.
2. To remove, turn the key and pull Chain.

⚠ It is highly recommended to use a second lock along with this Frame Lock and Chain.

⚠ Make a note of ID number attached to the keys. If you lose a key, you can send a service order for a replacement key directly to ABUS® or an ABUS® subsidiary.

LIMITED PRODUCT WARRANTY INFORMATION:

This Product comes with an ONE (1) YEAR Limited Warranty from the date of retail purchase by the original end-user. If a material or workmanship defect arises and a valid claim is received within the Warranty Period, this Product will be replaced. Mobility Holdings cannot be held liable for damages to personal property due to misuse or improper care and maintenance. This Product Warranty does not, under any circumstance, cover the replacement or cost of any third party product used with or connected to the Product.

Tern, the Tern Werd (logotype), the Tern Berd (device), GSD, used alone or in combination are trade names, trade devices or registered trademarks of Mobility Holdings, Ltd.

Trademarks are the property of their respective owners.

© 2018 Mobility Holdings, Ltd.

   Tern Bicycles

ternbicycles.com