


Safety

- ⚠ Do not exceed the load limit of 60 kg (132 lb). Please remember the max load limit includes the weight of the bike.
- ⚠ Never leave children on a parked bike unattended.

What’s Included

- DuoStand
- M10 x 30 Bolt x 2
- M10 x 70 Bolt x 1
- M10 Nut x 2
- M10 Washer x 4
- M10 Spring Washer x 1
- Flat Plate

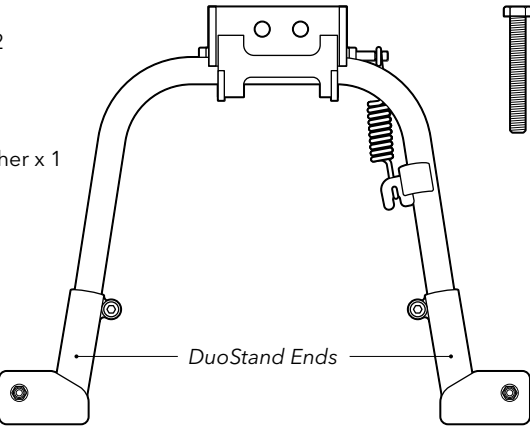


Additional Kit Required (For HSD Gen 1 Owners Only)

⚠ The DuoStand HSD Kit (sold separately) is required to install the DuoStand on the HSD Gen 1. Please see the illustrations on the next page to determine which HSD frame you have.

*** DuoStand HSD Kit**

- M10 x 45 Bolt x 2
- Bushing x 2
- Wing-shaped Plate

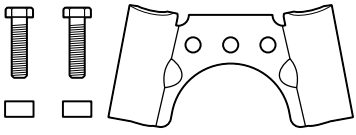


Installation


- Tools required (not included)**
- 17 mm Wrench x 2
 - 3, 4 or 5 mm Allen Wrench*

* Tool for removing the existing kickstand may differ depending on your bike.

1. Remove the existing kickstand. (Tool may differ depending on your bike.)

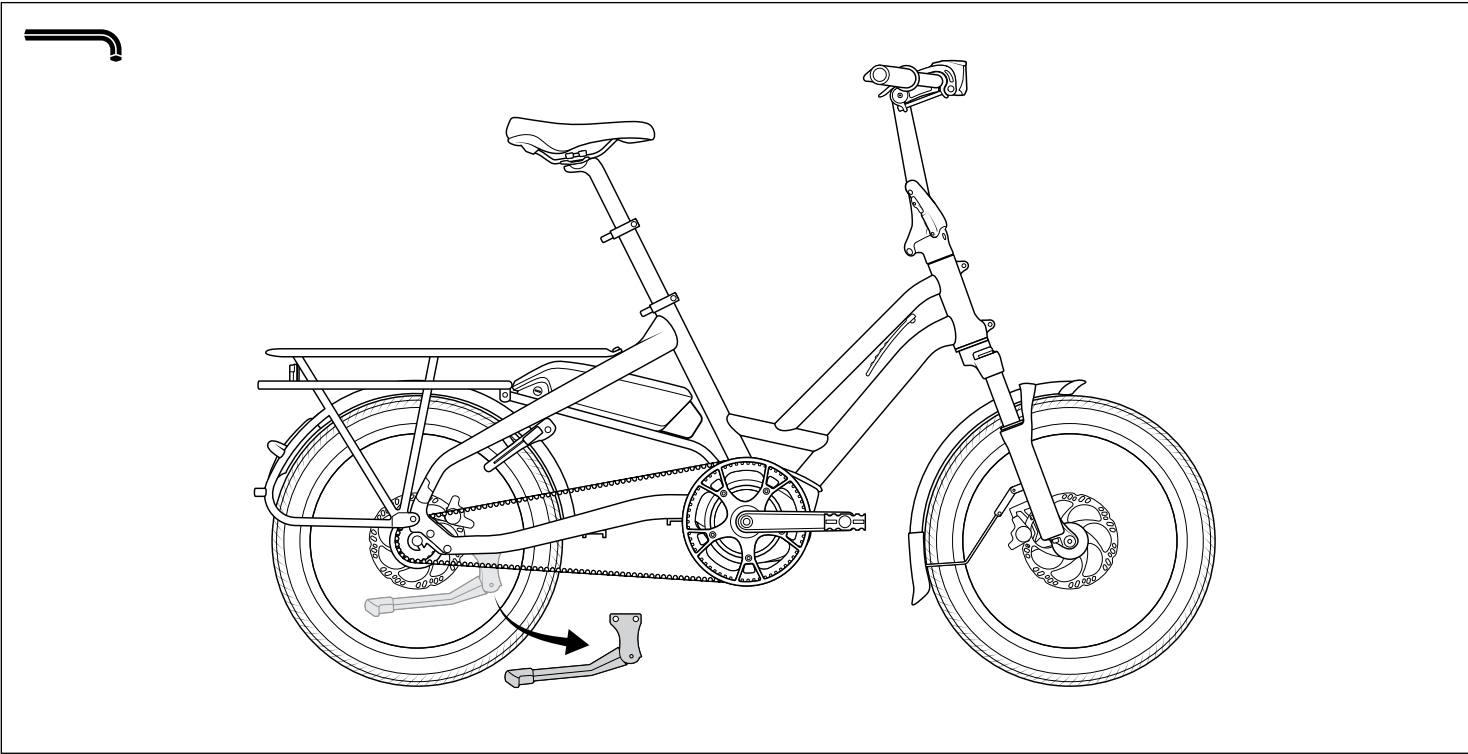


2. Identify the HSD frame by locating the kickstand mount in front of the rear wheel.

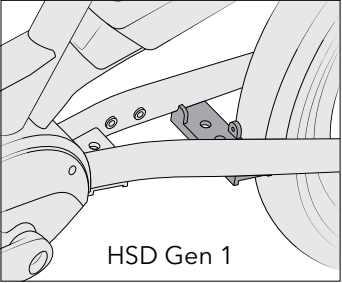

HSD Gen 1

HSD Gen 1 frame variants

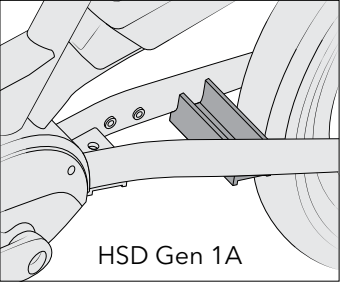

HSD Gen 1A



HSD

3. Install Bolt Sets in the order and arrangement shown below.

HSD Gen 1 Assembly Order

1. Nut
2. Washer
3. Wing-shaped plate*
4. Bushing*
5. HSD
6. Flat Plate
7. DuoStand
8. Washer
9. Bolt*



* Use parts from the DuoStand HSD Kit.

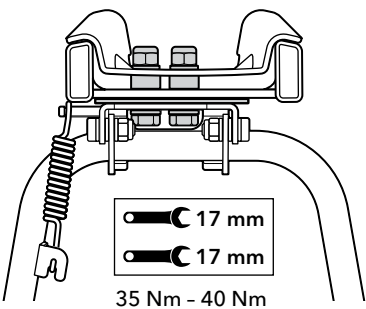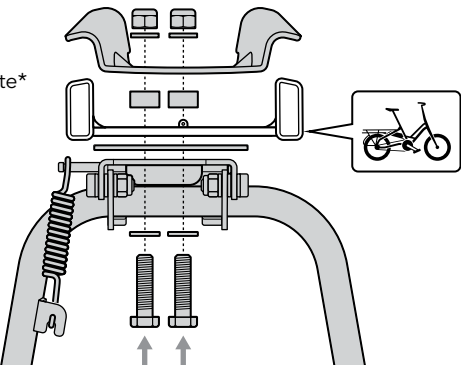

17 mm
17 mm
35 Nm - 40 Nm


HSD Gen 1A Assembly Order

1. Nut
2. Washer
3. HSD
4. Flat Plate
5. DuoStand
6. Washer
7. Bolt

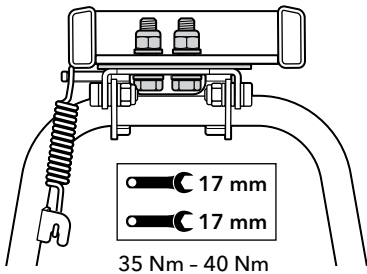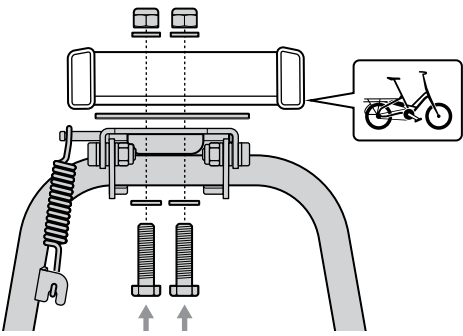


17 mm
17 mm
35 Nm - 40 Nm

HSD Gen 1 only

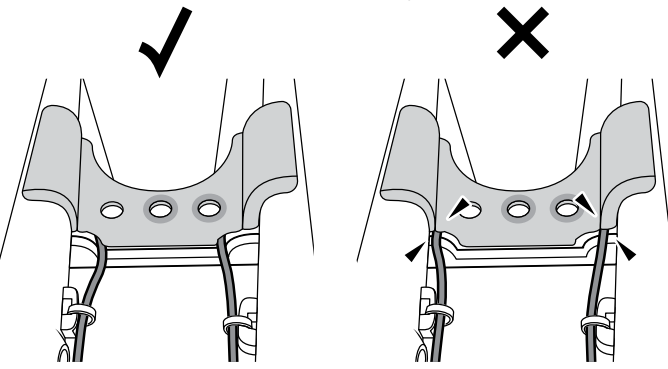


⚠ **WARNING:** Route cables as shown to avoid damage from compression.

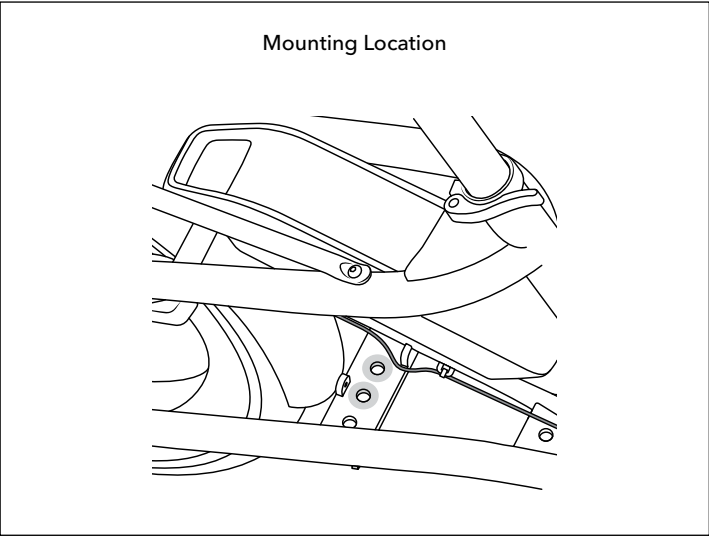


Other Bikes

Assembly Order

- 1. Nut
- 2. Washer
- 3. Bike
- 4. DuoStand
- 5. Washer
- 6. Bolt


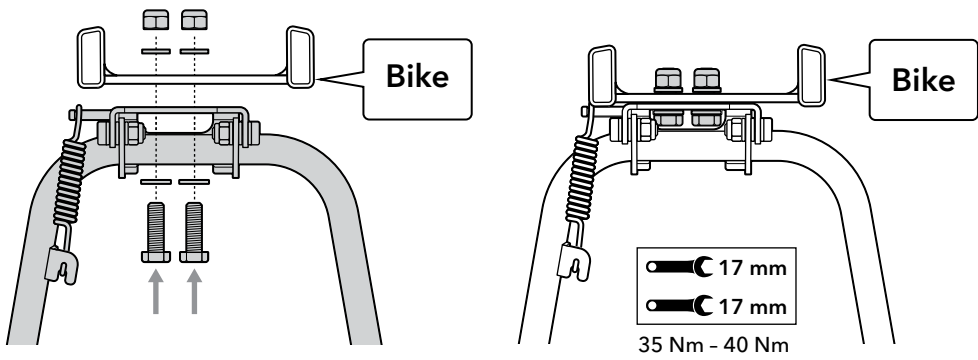


Mounting Location

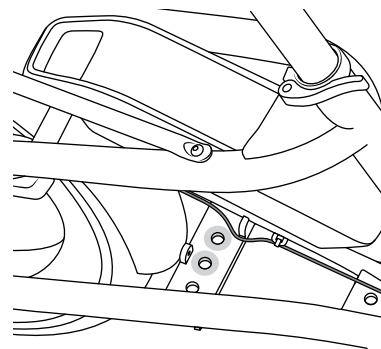


4. Measure the distance from the bottom of the rear tire to the ground and adjust the height of the DuoStand.

⚠ The recommended clearance from the bottom of the rear wheel to the ground is 10 - 20 mm (2/5" - 4/5"). If adjustment is needed, loosen the bolts on the DuoStand Ends to raise or lower the legs. Tighten the bolts to a torque of 8 - 9 Nm.

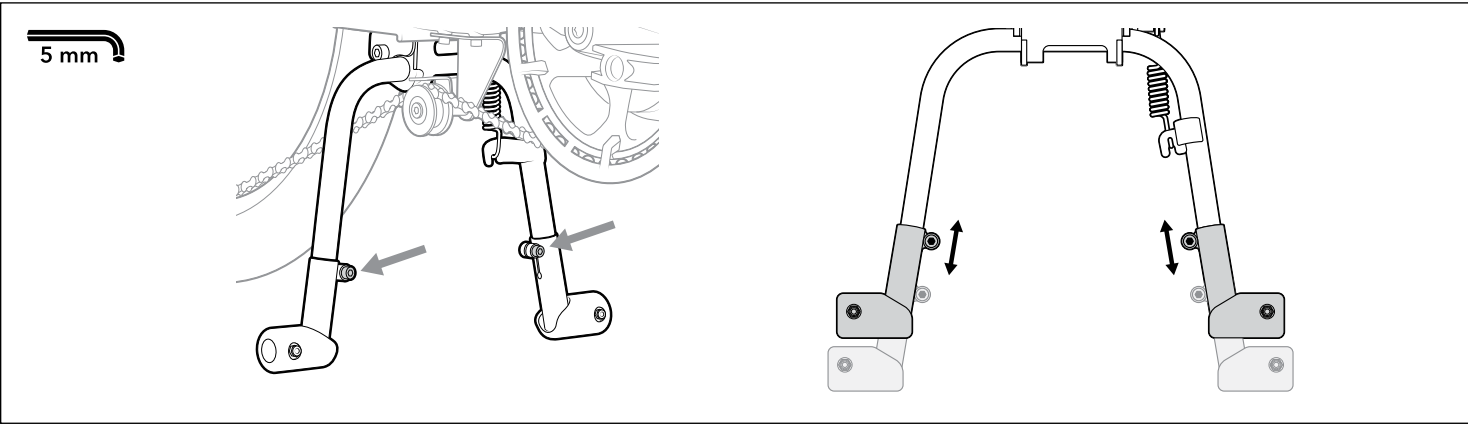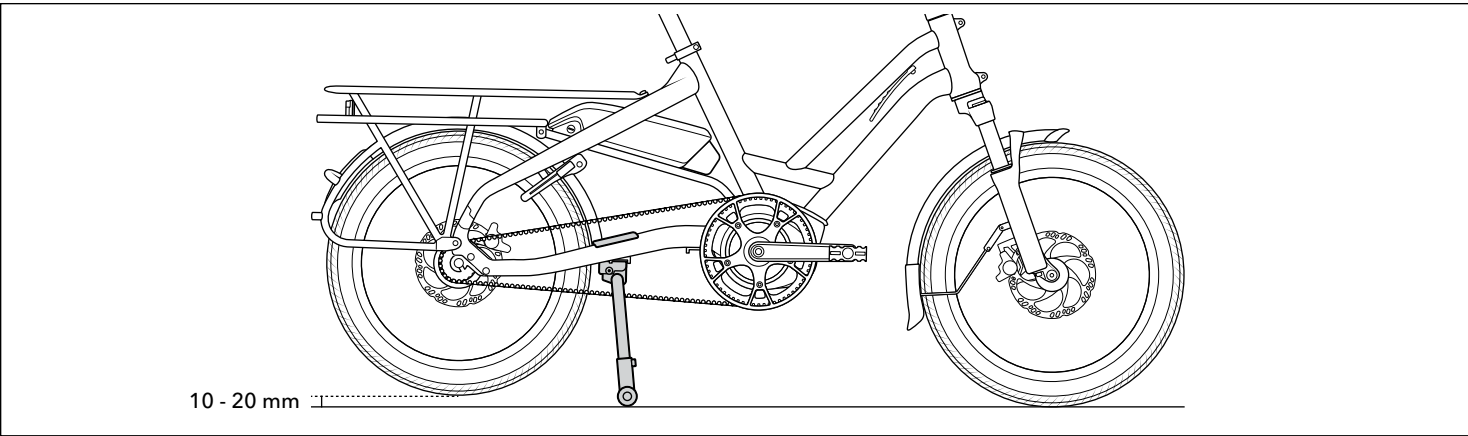

Optional: Install the Lockstand™ Extensions

For maximum stability when parked, install the **Lockstand Extensions** which are available for purchase from your local Tern dealer.

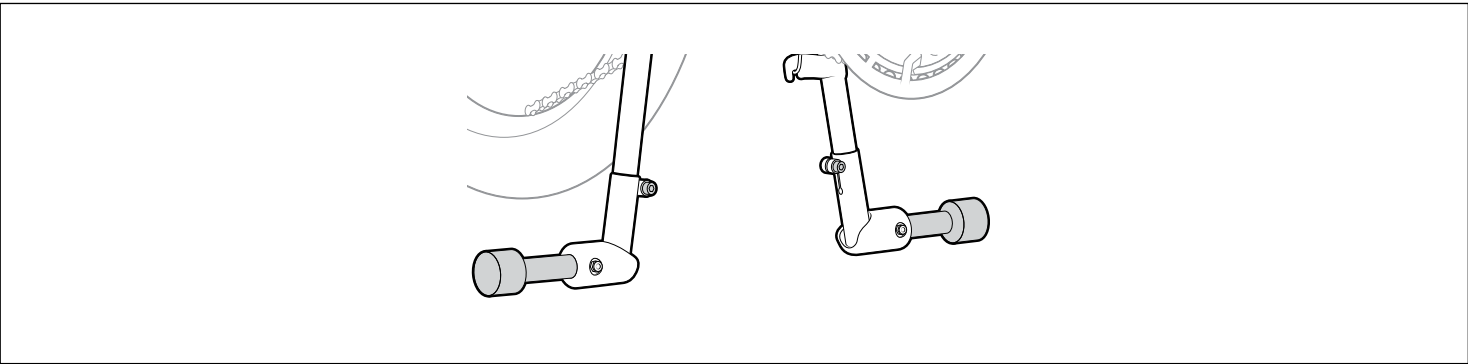

LIMITED PRODUCT WARRANTY INFORMATION: This Product comes with a ONE (1) YEAR Limited Warranty from the date of retail purchase by the original end-user. If a material or workmanship defect arises and a valid claim is received within the Warranty Period, this Product will be replaced. Mobility Holdings cannot be held liable for damages to personal property due to misuse or improper care and maintenance. This Product Warranty does not, under any circumstance, cover the replacement or cost of any third party product used with or connected to the Product.

Tern, the Tern Werd (logotype), the Tern Berd (device), Lockstand, and DuoStand used alone or in combination are trade names, trade devices or registered trademarks of Mobility Holdings, Ltd.

© 2022. Tern is a trademark of Mobility Holdings, Ltd. All Rights Reserved.

f t i @ternbicycles

ternbicycles.com