


DuoStand™ Ends

What's Included

- DuoStand™ Ends

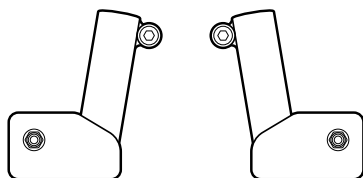




Installation

Tools required (not included)



- 5 mm Allen Wrench
- 17 mm Wrench x 2
- Hacksaw
- Hand File

1. Remove DuoStand (Gen 1) from bike. (Note the assembly order of the bolts and hardware.)

For DuoStand (Gen 2) owners, do not remove the DuoStand from the bike.

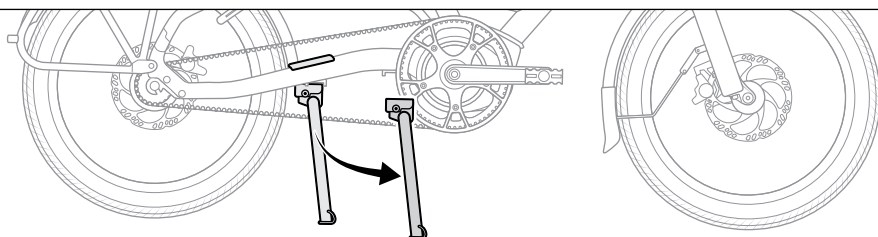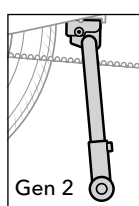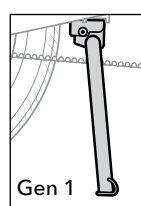


2. Measure and use the hacksaw to shorten the legs of the DuoStand (Gen 1). Use the hand file to smooth the metal burrs.

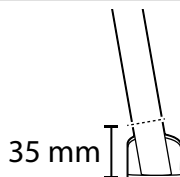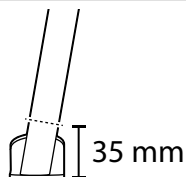


CAUTION: Please note this step is only for owners of the DuoStand (Gen 1) version. Do not shorten if you are installing the DuoStand Ends on a DuoStand (Gen 2) version.



3. Install DuoStand Ends. Loosely tighten the bolts. Bolts will be fully tightened after height adjustments are completed in Step 5.

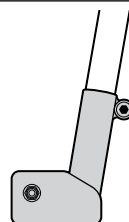



Loosely tighten

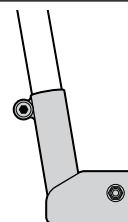

4. Reinstall the DuoStand (Gen 1).

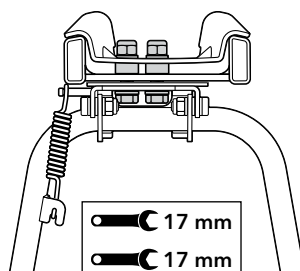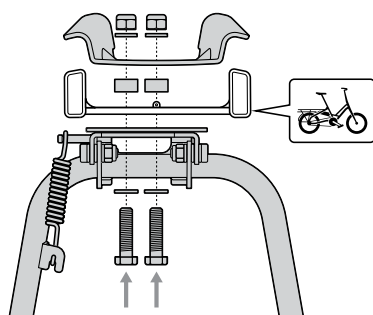

35 Nm - 40 Nm

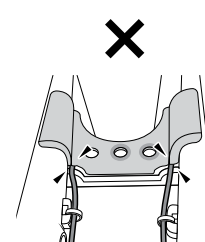
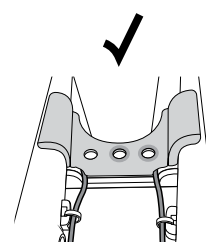


WARNING: Route cables as shown to avoid damage from compression.

DuoStand™ Ends


5. Measure the distance from the bottom of the rear tire to the ground and adjust the height of the DuoStand.

⚠ The recommended clearance from the bottom of the rear wheel to the ground is 10 - 20 mm (2/5" - 4/5"). If adjustment is needed, loosen the bolts on the DuoStand Ends to raise or lower the legs.

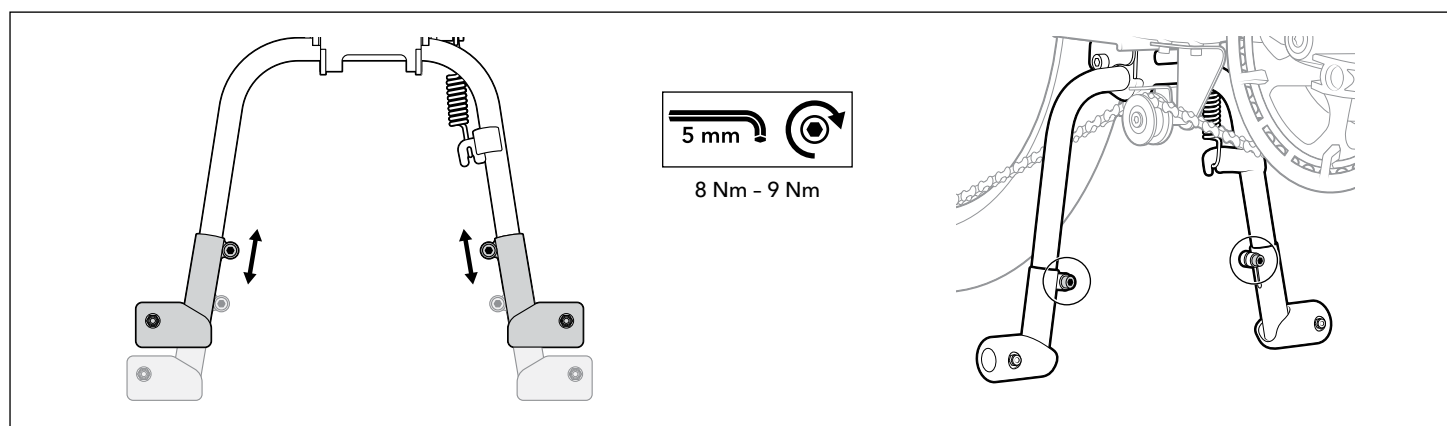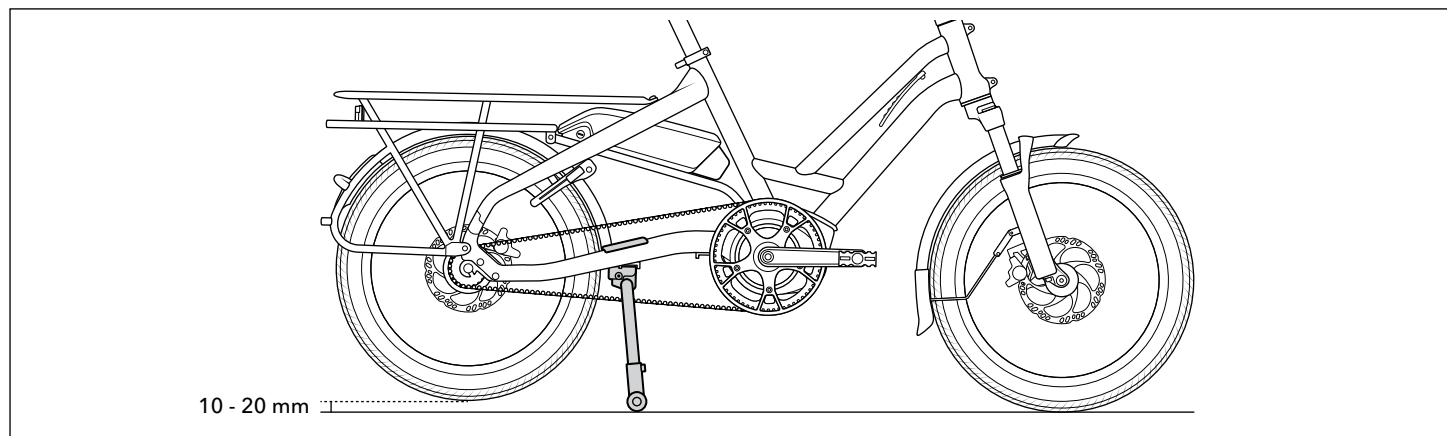

Optional: Install the Lockstand™ Extensions

For maximum stability when parked, install the **Lockstand Extensions** which are available for purchase from your local Tern dealer.

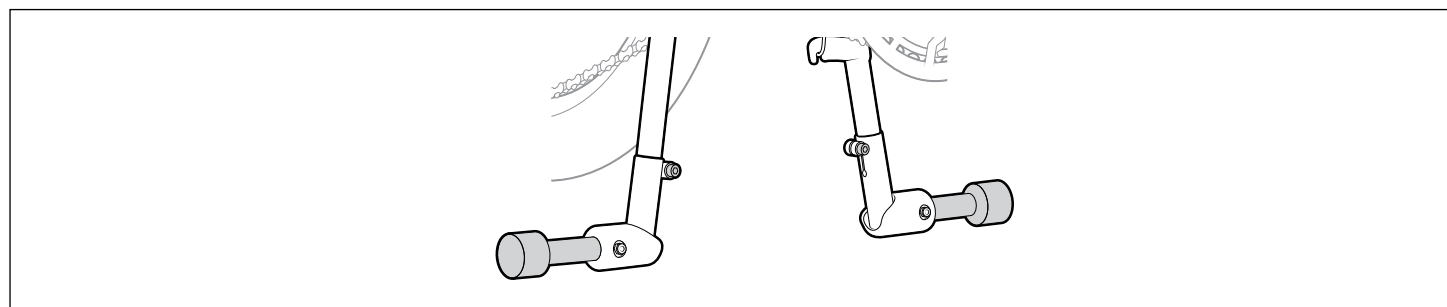

LIMITED PRODUCT WARRANTY INFORMATION: This Product comes with a ONE (1) YEAR Limited Warranty from the date of retail purchase by the original end-user. If a material or workmanship defect arises and a valid claim is received within the Warranty Period, this Product will be replaced. Mobility Holdings cannot be held liable for damages to personal property due to misuse or improper care and maintenance. This Product Warranty does not, under any circumstance, cover the replacement or cost of any third party product used with or connected to the Product.

Tern, the Tern Werd (logotype), the Tern Berd (device), and DuoStand used alone or in combination are trade names, trade devices or registered trademarks of Mobility Holdings, Ltd.

© 2021. Tern is a trademark of Mobility Holdings, Ltd. All Rights Reserved.

   @ternbicycles

ternbicycles.com